


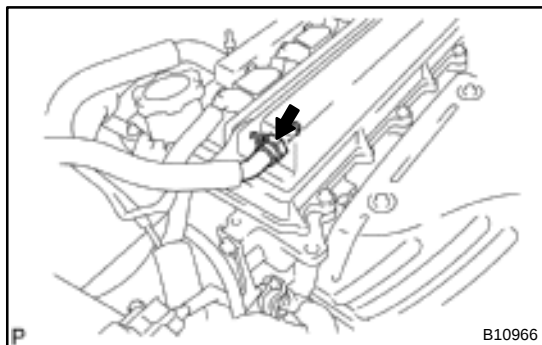


## POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION

EC02H-06

### 1. REMOVE PCV VALVE

- (a) Disconnect the PCV hose from the PCV valve.
- (b) Remove the PCV valve.

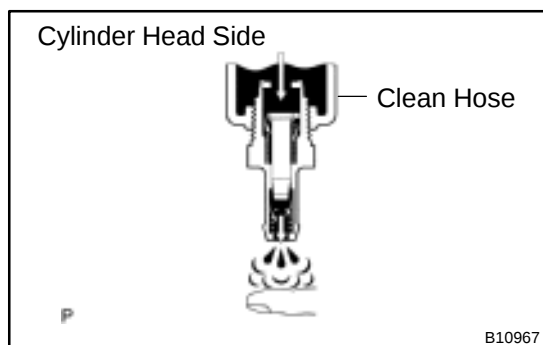


### 2. INSTALL CLEAN HOSE TO PCV VALVE

### 3. INSPECT PCV VALVE OPERATION

- (a) Blow air into the cylinder head side, and check that air passes through easily.

#### CAUTION:

Do not suck air through the valve. Petroleum substances inside the valve are harmful.

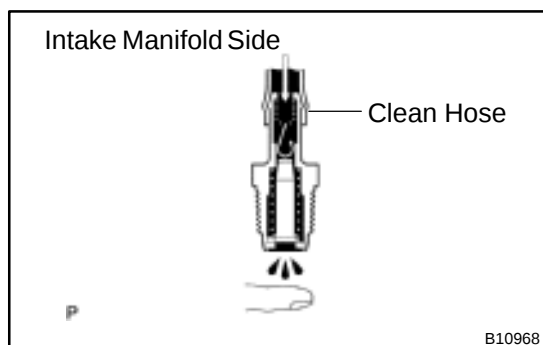


- (b) Blow air into the intake manifold side, and check that it has a little difficulty for the air to pass through.

If operation is not as specified, replace the PCV valve.

### 4. REMOVE CLEAN HOSE FROM PCV VALVE

### 5. REINSTALL PCV VALVE

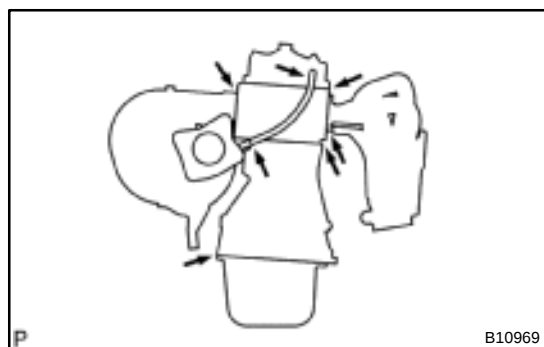

### 6. INSPECT HOSES, CONNECTIONS AND GASKETS

Visually check for cracks, leaks or damage.