

REMOVAL

1. REMOVE SUSPENSION UPPER BRACE


Torque:

74 N·m (755 kgf·cm, 55 ft·lbf) for bolt

80 N·m (816 kgf·cm, 59 ft·lbf) for nut

2. REMOVE AIR CLEANER CAP AND AIR HOSE ASSEMBLY

3. DISCONNECT WIRE HARNESS

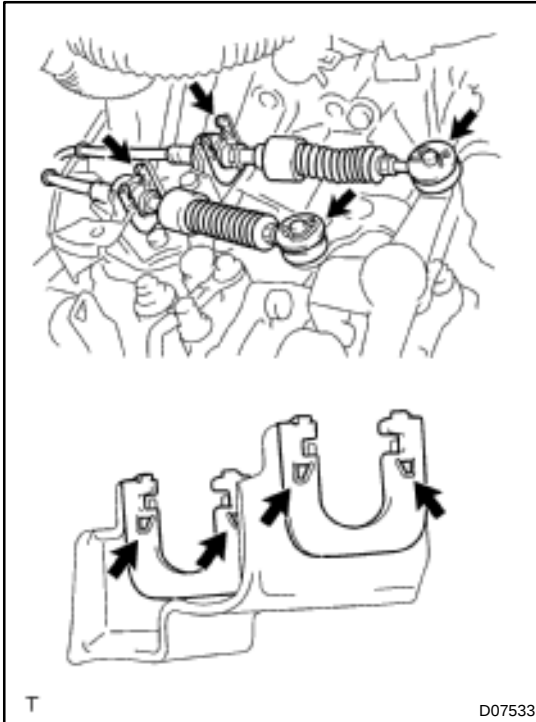

4. DISCONNECT CONTROL CABLES FROM TRANSAXLE

(a) Remove the 2 clips and 2 washers.


(b) Remove the 2 clips and disconnect the 2 control cables.

HINT:

Remove the select cable from the bracket by pressing the projection of the clip.

5. REMOVE SHIFT AND SELECT CONTROL CABLES

(a) Remove the fuel tank (See page [SF-29](#)).

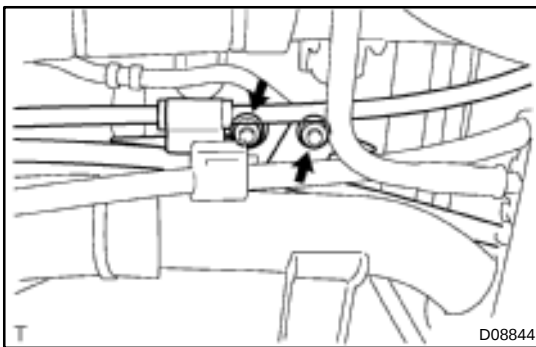


(b) Remove the 2 nuts.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

(c) Remove the driver and passenger seats (See page [BO-49](#)).

(d) Remove the console box (See page [BO-41](#)).

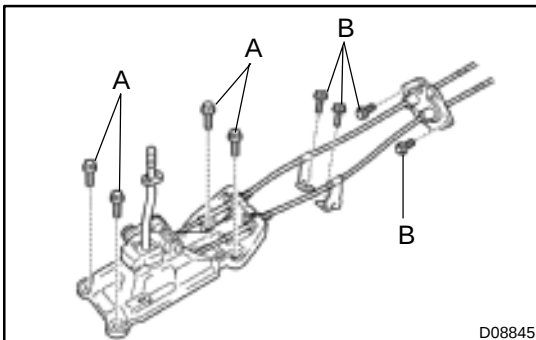

(e) Remove the 8 bolts and the shift lever and control cables assembly.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf) for bolt A

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf) for bolt B

(f) Remove the shift and select control cables from the shift lever assembly.