

TROUBLESHOOTING

SR08G-04

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in the order shown. If necessary, repair or replace these parts.

Symptom	Suspect Area	See page
Hard steering	9. Tires (Improperly inflated) 10. Power steering fluid level (Low) 11. Front wheel alignment (Incorrect) 12. Steering system joints (Worn) 13. Suspension arm ball joints (Worn) 14. Steering column (Binding) 15. Power steering vane pump 16. Power steering gear	SA-2 SR-4 SA-4 – SA-25 – SR-22 SR-32
Poor return	1. Tires (Improperly inflated) 2. Front wheel alignment (Incorrect) 3. Steering column (Binding) 4. Power steering gear	SA-2 SA-4 – SR-32
Excessive play	1. Steering system joints (Worn) 2. Suspension arm ball joints (Worn) 3. Intermediate shaft, Sliding yoke (Worn) 4. Front wheel bearing (Worn) 5. Power steering gear	– SA-25 – SA-9 SR-32
Abnormal noise	1. Power steering fluid level (Low) 2. Steering system joints (Worn) 3. Power steering vane pump 4. Power steering gear	SR-4 – SR-22 SR-32

HINT:

When the problem occurs on the Electro-Hydraulic Power Steering system, refer to the DI section (See page [DI-200](#)).