

POWER STEERING FLUID BLEEDING

SR08I-04

1. **CHECK FLUID LEVEL** (See page [SR-4](#))
2. **JACK UP FRONT OF VEHICLE AND SUPPORT IT WITH STANDS**

3. **TURN STEERING WHEEL**

With the engine stopped, turn the steering wheel slowly from lock to lock several times.

4. **LOWER VEHICLE**

5. **START ENGINE**

Run the engine at idle for a few minutes.

6. **TURN STEERING WHEEL**

- (a) With the engine idling, turn the steering wheel to left or right full lock position and keep it there for 2–3 seconds, then turn the steering wheel to the opposite full lock position and keep it there for 2–3 seconds.

- (b) Repeat (a) several times.

7. **STOP ENGINE**

8. **CHECK FOR FOAMING OR EMULSIFICATION**

If the system has to be bled twice specifically because of foaming or emulsification, check for fluid leaks in the system.

9. **CHECK FLUID LEVEL** (See page [SR-4](#))

