


INSTALLATION

1. INSTALL POWER STEERING VANE PUMP

Install the power steering vane pump with the 2 bolts, nut and 3 washers.

Torque: 19 N·m (190 kgf·cm, 14 ft·lbf)

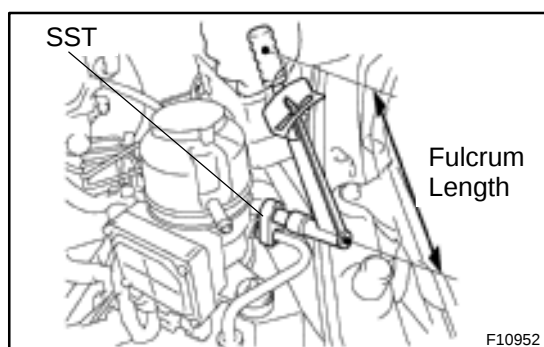

2. CONNECT PRESSURE FEED TUBE

Using SST, connect the pressure feed tube.

SST 09023-12700

Torque: 39.5 N·m (400 kgf·cm, 29 ft·lbf)

HINT:

Use a torque wrench with a fulcrum length of 345 mm (11.81 in).

3. CONNECT RETURN HOSE

Connect the return hose with the clip.

4. CONNECT ECU CONNECTORS

5. BLEED POWER STEERING SYSTEM

(See page [SR-3](#))

6. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER